

ASSA Code Handle

Electromechanical handle Fix 7810



Application

- Electromechanical handle FIX 7810 for terrace doors to be locked from inside only
- The product is patented

Features

- Meets the mechanical requirements according to Swedish Standard SS3620, class B
- To be fitted with one-way-screws (security screws)
- Distance between screw holes, c/c 43 mm
- Material, Zink alloy, satin- or bright chrome
- Spindle of 8 mm square steel, length 53 mm
- Right- or left cranked

Function

- The locking mechanism is operated with five buttons.
- Four buttons to press a six-digit code to unlock and one button to lock
- Green light flashes when the buttons are pressed for unlocking and red light flashes when locking
- Supplied with a standard code which can easily be changed by the operator
- The code is constant at voltage drop or battery change
- Supported by 2 pcs. 3-Volts lithium batteries, CR2, which gives approx. 100.000 operations
- Red light indicates low battery when approximately 500 operations left

ASSA[®]
ASSA ABLOY

ASSA Code Handle

Electromechanical handle Fix 7810

How to use ASSA Code Handle

Batteries





ASSA Code Handle needs to be fitted with two batteries, CR2, before you are able to use it.

1. Unlock the handle by pressing the right code on the buttons 1-4. When delivered the code is 11-22-33.

2. Lock the handle by pressing the red button.

Change the code

All the handles are supplied with the same code. It is important to change the code to your own one. The code has to have 6 digits and can be changed unlimitedly. Instructions of how to change the code is included in the package.

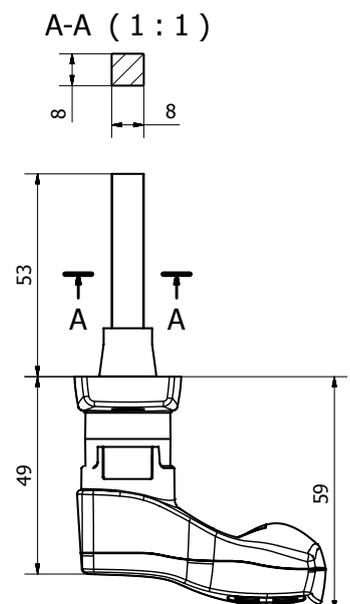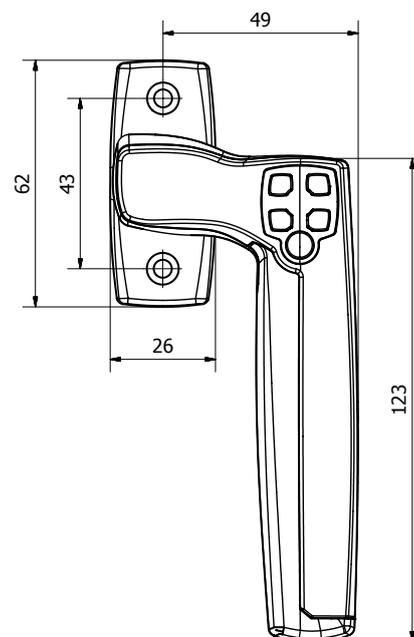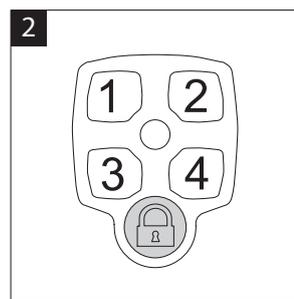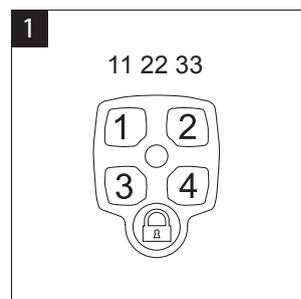

ASSA ABLOY, the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.

ASSA OEM AB
P.O. Box 371
SE-631 05 Eskilstuna
Sweden

phone +46 (0)16 17 70 00

ASSA OEM AB
Bruksgatan 17
SE-414 51 Göteborg
Sweden

phone +46 (0)31 704 40 40